



Tabela dobora oprave - 1 piétro	
A1	ALED AL20000400 FATE SENSOR LED PT 40W 4000K 4000lm
A2	ALED AL20000400 FATE SENSOR LED NT 40W 4000K 4000lm
A3	ALED AL20000400 FATE SENSOR LED 40W 4000K 4000lm
A4	ALED AL21040040 FATE SENSOR LED 40W 4000K 4000lm
B1	ALED AL22000400 FATE TROFER LED 20W 4000K 4500lm
B2	ALED AL22000400 FATE TROFER LED 20W 4000K 3700lm
C1	ALED AL19350400 FATE SR 6060 35W AL4000K
D1	ALED AL16320400 FATE 6030 20W 4000K 4100lm
D2	ALED AL17080400 FATE 6030 18W 4000K 2000lm
E1	ALED AL36180600 STARTER 18W 4000K 5070lm IP54
F1	ALED AL30180600 FIN LED 20W 4000K 10500lm IP54

[illegible]